 
 
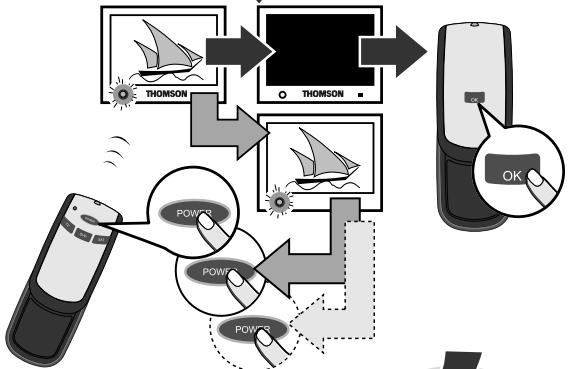 
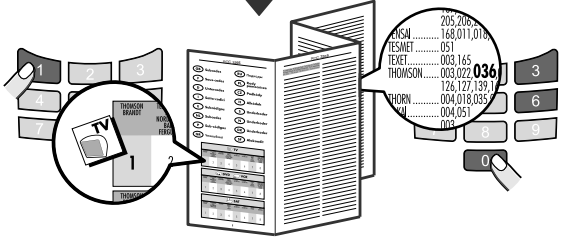 
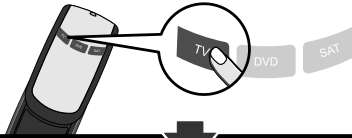 


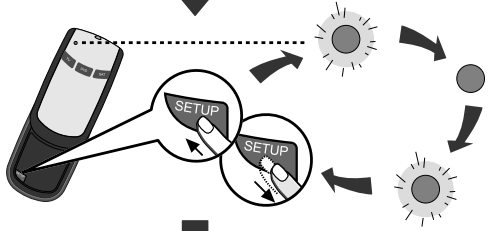

THOMSON

ROC3205

User manual

 
 
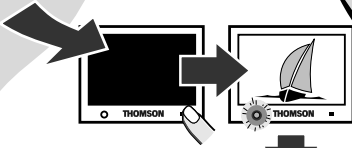 



This universal remote control is compatible with the majority of television sets, DVD players, satellite receivers and infrared controlled cable.

This remote control has already been programmed so that you can use it to control most of the audio/video products made by the THOMSON group. Before attempting to programme the remote control, try it out by using one of the methods described in this user manual. The two CR2032 batteries are already fitted in the remote control. Refer to the diagram on the cover to replace them when they are worn out.

Please keep this guide along with the code list (provided separately), so that you can programme your remote control for use with other products.

I - Description of the key functions

- 1 Indicator lamp: the red indicator lamp lights up when any key is pressed.
- 2 Product keys (**TV**, **DVD** or **SAT**): Used to programme and control different products (TV, satellite receiver, DVD player and so on).
- 3 **SHIFT**: activates the secondary key features (indications in blue).
- 4 **VOL-**, **VOL+** Increases (+) or decreases (-) the volume of the TV set;
SHIFT + ◀▶: also allows you to navigate the menus horizontally.
- 5 : Teletext On/Off in TV mode.
SHIFT + MENU: turns on the menu of the selected products
- 6 **◀◀** (rewind): Goes backward or advances forward (**DVD**)*.
- 7 **RECORD**: To record, press the **RECORD** key twice.
- 8 Stop the disc (**DVD**)*.
- 9 **Number keys 0 to 9**: these keys have the same functions as those of your original remote and are also used to enter the codes for different products.
- 10 : stop page scrolling (videotext).
- 11 **SETUP**: Programmes the remote control.
- 12 **POWER**: On/Standby.
- 13 **AV**: For selecting an external source (SCART).
- 14 **PROG+**, **PROG-**: Programmes zapping button (received by the television set or the satellite receiver); use to scroll vertically through menus.
SHIFT + ▲ / ▼: also allow you to navigate the menus vertically.
- 15 **MUTE**: Switches the TV sound off.
SHIFT + OK: confirms a selection.
- 16 : Teletext Off in TV mode.
SHIFT + EXIT: turns off the menu of the selected product.
- 17 **▶** (play): play a DVD disc **DVD***.
- 18 **▶▶**: fast forward (**DVD**)*.
- 19 **⏸**: Suspends play and stops on an image*.
- 20 : Videotext inlay on TV picture.
- 21 Press this key first before you type in the 2-digit channel number (except for Thomson group products).

*The coloured buttons can be used to select categories when teletext is activated, and specific functions depending on the make.

2 - Testing the remote control before you programme it

1. Turn on the product you want to control.

2. Press the product key (2) that corresponds to the type of product you want to control:
TV: television set, **DVD**: DVD player,
SAT: satellite receiver.
3. Point the remote control towards the product and try to turn it off by pressing the **POWER** (12) key. If the product doesn't turn off, you'll need to programme the remote control by one of the methods described in chapter 3.

3 - Programming the remote control

Method A – Fast programming with 1-digit subcode

Before you start programming, you must find the subcode of the product to be controlled (television set, satellite receiver or DVD player).

Refer to the list provided with these instructions, page 1 of the codes.

1. Turn on the product you want to control.
2. Hold down the **SETUP** (11) key until the red indicator lamp (1) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Press the product key (2) that corresponds to the type of product you want to control:
TV: television set, **DVD**: DVD player,
SAT: satellite receiver.
4. While the indicator is lit, type in the subcode (example: 1 for THOMSON).
5. Point the remote towards the product and try to turn it off by pressing the **POWER** (12) key.
6. If the product you want to control turns off, press the **MUTE** (15) key to save the subcode.
7. If the product doesn't turn off, press the **POWER** (12) key repeatedly until the set switches off. Wait approximately one second between key presses to give the red indicator lamp (1) enough time to go off and light up again. This will allow you to see whether the product responds or not.
8. Immediately after the product to be controlled turns off, press the **MUTE** (15) key to save the subcode.

Note:

*If you want to assign another type of product than those mentioned on the remote control (with the exception of the **TV** button which can only be used to control a television set), begin by entering the code that corresponds to the product you want to programme (a 3-digit code that you will find in the code booklet – see method B).*

*Example: if you want to control a satellite receiver with the **DVD** key, begin by entering a satellite code (any satellite, for example: 603 for a Thomson satellite receiver) then begin the procedure.*

Checking the programming:

Your product should be ready to receive remote control commands. Check to see that your remote functions correctly by performing the test described on page 3.

Method B - 3-digit codes programming

Before you start programming, you must find the **code** for the product to be controlled (television set, satellite receiver or DVD player).

Refer to the list provided with these instructions, on page 11 of the **codes**.

1. Turn on the product you want to control.
2. Hold down the **SETUP (11)** until the red indicator lamp (1) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Press the product key (2) that corresponds to the type of product you want to control:
TV: television set, **DVD:** DVD player,
SAT: satellite receiver.
4. While the indicator is lit, enter the 3-digit code proposed for the product to be controlled (example: **036** for THOMSON). The red indicator then goes off if the code is correct or flashes, if the code is not on the list.
5. Point the remote control towards the product and try to turn it off by pressing the **POWER (12)** key.
6. If the product doesn't turn off, repeat step 2, using the next 3-digit code in the list. Try to turn off the product by pressing **POWER (12)** key once. Repeat this procedure until one of the 3-digit codes works.

Checking the programming:

Your product should be ready to receive remote control commands. Check to see that your remote functions correctly by performing the test described on page 3.

Method C - Programming by means of code retrieval

If none of the codes work, you may still be able to retrieve the appropriate code.

1. Turn on the product you want to control.
2. Hold down the **SETUP (11)** key until the red indicator lamp (1) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Press the product key (2) that corresponds to the type of product you want to control:
TV: television set, **DVD:** DVD player,
SAT: satellite receiver.
4. Point the remote control towards the product and try to turn it off by pressing the **POWER (12)** key.
5. If the appliance to be controlled switches off, press the **MUTE (15)** key to memorise the code.
6. If the product does not turn off, press the **POWER (12)** key until the product switches off (up to 200 times). Wait approximately one second between key presses to give the red indicator lamp (1) enough time to go off and light up again. This will allow you to see whether the product responds or not.
7. Immediately upon turning off the product to be controlled, press the **MUTE (15)** key to save the code.

Note:

If you want to assign another type of product than those mentioned on the remote control, begin by entering a code that corresponds to the product you want to programme (a 3-digit code that you will find in the code booklet – see method B).

Example: if you want to control a satellite receiver with the **DVD** key, begin by entering a satellite code (any satellite, for example: 603 for a Thomson satellite receiver) then begin the procedure.

Checking the programming:

Your product should be ready to receive remote control commands. Check to see that your remote functions correctly by performing the test described on page 3.

Method D - Automatic code search

With this method, the remote scrolls through the full code list by sending an IR signal to the product to be controlled remotely.

1. Check that your product is on. If not, turn it on manually.
2. Hold down the **SETUP (11)** key until the red indicator lamp (1) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Release the **SETUP** key.
4. Press the product key (2) corresponding to the type of product you want to control: (for example **TV**).
5. Press **PROG+ (14)**. After a few seconds, the remote begins to scroll through the code list at approximately 1 code per second. Press **PROG+ (14)** once again to slow down the test speed (1 code every 3 seconds). As soon as the product changes channels, press the **MUTE (15)** key to save the code and stop the remote from scrolling through the list. If you have gone past the code, you can go back to the previous code by pressing **PROG- (14)** as many times as necessary (you can go forward by pressing **POWER (12)** or **PROG+ (14)**). As soon as the product responds again, press the **MUTE (15)** key to save the code.

Note:

If you want to assign another type of product than those mentioned on the remote control, begin by entering a code that corresponds to the product you want to programme (a 3-digit code that you will find in the code booklet – see method B).

Example: if you want to control a satellite receiver with the **DVD** key, begin by entering a satellite code (any satellite, for example: 603 for a Thomson satellite receiver) then begin the procedure.

Method E - Programming for control of a COMBO TV/VCR, TV/DVD

Depending on the **COMBO** group (TV/VCR, VCR/DVD, etc.) and the make, you will be required to enter a single code for both devices in the **COMBO**, or to enter two codes, one code per device. Consult the separate list to discover this.

Before you start programming, you must find the **subcode** or **code** of the subset to be controlled (television or video recorder).

Refer to the list supplied with this user manual (see page **subcodes** or **codes**).

1. Turn on the COMBO you want to control.
2. Hold down the **SETUP (11)** key until the red indicator lamp (1) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Press the **TV (2)** key, then follow one of the programming methods (**A, B, C** or **D**) described earlier.
4. If second code programming is required then repeat steps 2 and 3 above.

4 - How to retrieve a programmed code

You may want to retrieve the code programmed in the remote control.

1. Hold down the **SETUP (11)** key until the red indicator lamp (1) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
2. Press the product key (2) that corresponds to the type of product you want to control:
TV: television set, **DVD**: DVD player,
SAT: satellite receiver.
3. Press **SETUP (11)** again briefly. The red indicator lamp flashes once.
4. Press the number keys (0 to 9) in ascending order until the red indicator lamp (1) flashes once.
5. The digit which made the red indicator lamp (1) flash, is the first number of the 3-digit code. Please make note of it.
6. Repeat step 4 to find out the two other numbers of the code.
7. When the third number is found, the red indicator lamp (1) goes off.

5 - Check the programming

- For a television or a satellite receiver: turn on and off, then try to change channels using a digit key (9).
- DVD player: load a DVD and then press **PLAY (▶)** (18).

Try other remote control keys to find out which functions you can control. If you think that not all of the keys are active, try the programming **Method B** or **C**. **When you have retrieved the code of your product, make note of it.**

After battery replacement, you may have to programme the remote control again.

TV CODE			DVD CODE		
SAT CODE					

6 - Controlling volume in satellite and cable mode

For satellite systems with a volume control, you can choose the product that the **MUTE (15)** and **VOL (4)** keys will control: the television volume or the volume of the satellite or cable receiver.

To choose, proceed as follows:

1. Press the **TV (2)** key (the remote control must be in TV mode for this procedure).
2. Hold down the **SETUP (11)** key until the red indicator lamp (1) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Release the **SETUP (11)** key.
4. Press the **MUTE (15)** key for around 8 seconds. The indicator light will blink and then go off for about 8 seconds before blinking once more and then staying off.
5. If the remote previously controlled the television volume in **SAT** mode, it will now control the volume of the satellite receiver; if it previously controlled the volume of the satellite receiver, it will now control the television volume.

7 - The NAVILIGHT system

The **THOMSON NAVILIGHT** navigation system allows you easy access to the settings of your television set (TV) or your video recorder (VCR) fitted with the **THOMSON NAVILIGHT** system provided that you have allocated the **DVD** or **SAT** keys to the video recorder.




1. Switch on the product you want to control.
2. Select the type of product concerned (**TV, DVD** or **SAT**). In the **DVD** position, make sure that the **AV** mode is activated for the TV set (the SCART socket must be selected).
3. Press the **SHIFT (3)** key once and then press the **MENU (5)** key.
4. To travel through the setting menus, press the up, down, left, right keys (4 and 14).
5. Confirm with **OK (15)**.
6. Exit the menus by pressing the **EXIT (16)** key.

*Note: The **SHIFT (3)** key remains on as long as light **I** is lit. If this light goes out, you have to press the **SHIFT** key again before using the navigation keys. To exit this mode, press **SHIFT** a second time.*




ENGLISH - Do not mix different types of batteries or new and old batteries. Do not use rechargeable batteries. In order to avoid any risk of explosion, observe polarities indicated inside the battery compartment. Replace only with the type of batteries specified above. Do not throw them into fire, do not recharge them. If you are not using the remote control for a long period of time, remove the batteries. Please respect the environment and prevailing regulations. Before you dispose of batteries or accumulators, ask your dealer whether they are subject to special recycling and if they will accept them for disposal.


ROC 3205

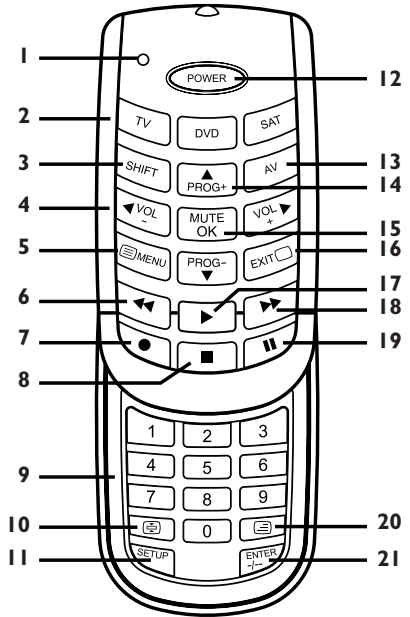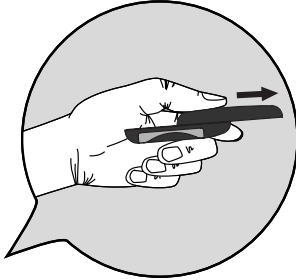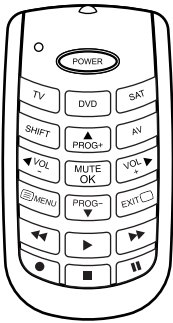


A

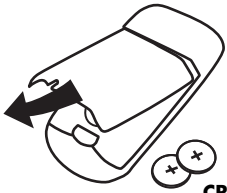

B

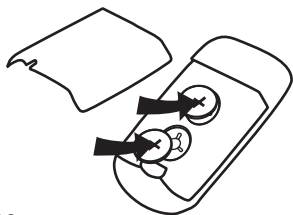 

C

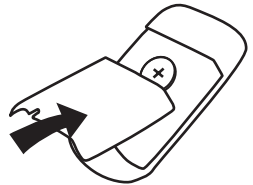 

CR2032

ROC3205

Model and serial number

THOMSON Sales Europe

46, quai A. Le Gallo

92648 Boulogne Cedex

FRANCE

322 019 464 RCS NANTERRE

<http://www.thomson-europe.com>

CE  35936920 © Copyright THOMSON 2005

Dealer's address

ROC 3205

EN Subcodes

FR Sous-codes

DE Untercoodes

IT Sotto-codici

ES Subcódigos

NL Subcodes

PT Sub-códigos

EL Υποκωδικοί

RU Подкоды

PL Kody pomocnicze

CS Podkódy

HU Alkódkok

SV Unterkoder

NO Unterkoder

DA Unterkoder

FI Alakoodit



TV

THOMSON BRANDT	TELEFUNKEN SABA NORDMENDE BAIRD FERGUSON	GRUNDIG BLAUPUNKT	NOKIA FINLUX ITT, LUXOR DANTAX, BEKO PROSONIC	FOR FUTUR USE	FOR FUTUR USE	PHILIPS ERRES PYE PHILCO RADIOLA	SONY, AKAI PANASONIC JVC, SHARP TOSHIBA DAEWO
1	2	3	4	5	6	7	8



DVD



VCR

THOMSON BRANDT	TELEFUNKEN SABA NORDMENDE BAIRD FERGUSON	GRUNDIG BLAUPUNKT	NOKIA FINLUX ITT, LUXOR DANTAX, BEKO PROSONIC	FOR FUTUR USE	FOR FUTUR USE	PHILIPS PYE PHILCO RADIOLA	SONY, AKAI PANASONIC JVC, SHARP TOSHIBA DAEWO
1	2	3	4	5	6	7	8



SAT

THOMSON BRANDT	TELEFUNKEN SABA NORDMENDE BAIRD FERGUSON	GRUNDIG	NOKIA FINLUX ITT LUXOR	FOR FUTUR USE	FOR FUTUR USE	PHILIPS PHILCO	PACE ECHOSTAR
1	2	3	4	5	6	7	8



TV codes

ACME003,047
 ADA021
 ADC012,004
 ACURA009,074
 ADMIRAL000,001,002,019,021,053,108
 ADYSON003
 AGAZI002
 AGB123
 AIKO003,004,009
 AIWA087,184,215
 AKAI004,006,008,009,011,051,061,068,069,070,
 086,133,141,169,200
 AKIBA011
 AKITO025
 AKURA002,011,071,169
 ALBA003,009,011,027,028,053,062,068,083,
 162,169,171
 ALBIRAL037
 ALKOS164
 ALLORGAN026,157
 ALLSTAR051
 AMPLIVISION003
 AMSTRAD002,009,011,013,030,068,069,071,074,
 108,123
 ANAM009,065,109
 ANGLO009
 ANITECH002,009,043,109
 ANSONIC009,014
 ARCAM DELTA003
 ARC EN CIEL045,126,139
 ARISTONA051,169
 ARTHUR MARTIN158
 ASA000,016,017,018,021,110
 ASBERG043,051
 ASTRA009
 ASUKA002,003,011
 ATLANTIC003,051,157,169
 ATORI009
 AUDIOSONIC003,009,011,051,139,157,169
 AUDIOTON003
 AUSIND043
 AUTOVOX000,002,003,043,101,125,157
 BAIRD111,139
 BANG & OLUFSON000,199
 BASIC LINE009,011,051
 BASTIDE003
 BAUR076,118,132,141,169
 BEKO007,034,042,083,216
 BEON051,169
 BEST113
 BESTAR051,115
 BINATONE003
 BLACK DIAMOND171
 BLACK STAR129
 BLAUPUNKT008,022,100,112,117,135,202
 BLUE SKY011
 BLUE STAR120
 BONDSTEC129
 BOOTS003,025
 BPL120
 BRANDT022,036,045,046,126,127,139
 BRION VEGA000,051,169
 BRITANNIA003
 BRUNS000,007
 BSR026,131
 BTC011
 BUSH009,011,019,024,025,027,028,032,039,051,
 062,068,107,115,120,131,132,139,167,169,171

CAPSONIC002
 CARREFOUR027
 CASCADE009
 CATHAY051,169
 CENTRUM168,171
 CENTURION051,169
 CENTURY000
 CGE043,053,129,131
 CIMLINE009,028
 CITY009
 CLARIVOX037,169
 CLATRONIC002,003,009,011,030,043,051,083,129
 CONCORDE009
 CONDOR003,051,083,198
 CONTEC003,009,027,029,030
 CONTINENTAL EDISON022,036,045,046,111,126,139
 COSMEL009
 CROSLEY000,043,129,131
 CROWN009,043,051,053,083,121,169
 CS ELECTRONICS003,011,129
 CTC129
 CTC CLATRONIC014
 CYBERCOM002,009,038,042,044,047,061,063,067,
 068,087,103,107,115,154,155,156,168,
 171,175,176,177,181,185,205,206,207,
 208,209,210,228
 CYBERMAXX002,009,038,042,044,047,061,063,067,
 068,087,103,107,115,154,155,156,168,
 171,175,176,177,181,185,205,206,207,
 208,209,210,228
 CYTRON002,009,038,042,044,047,061,063,067,
 068,087,103,107,115,154,155,156,168,
 171,175,176,177,181,185,205,206,207,
 208,209,210,228
 CYBERTRON011
 DAEWOO003,009,051,058,094,115,191
 DAINICHI011
 DANSAI002,051,169
 DANTAX034,088,148,161,169,171
 DATSURA121
 DAYTON009
 DE GRAAF006,019,033
 DECCA003,004,025,030,051,123,169
 DESMET051,169
 DIGIALITY203
 DIXI009,051,169
 DTS009
 DUAL002,003,009,038,042,044,047,061,063,
 067,068,087,089,103,107,115,125,126,
 131,139,154,155,156,160,168,171,175,
 176,177,181,205,206,207,208,228
 DUAL-TEC003,009,131
 DUMONT000,003,014,017,018
 DUX169
 DYNATRON051,169
 ELBE037,108,157
 ELCIT000
 ELECTRO TECH009
 ELECTA120
 ELIN003,016,018,051,169
 ELITE011,051
 ELMAN014,131
 ELTA009
 EMERSON000,127,141
 ERRES051,169
 ETRON009
 EURO-FEEL002

EUROLINE	088,149,169
EUROMANN	002,003,051
EUROPHON	003,014,025,051,123,131
EXPERT	157
FENNER	009,115
FERGUSON	035,036,037,050,052,081,095,111,127 163,166,169
FIDELITY	003,019,068,074,095,096
FINLANDIA	006,019,110,128
FINLUX	000,003,004,014,016,017,018,043,051 061,063,110,123,131,157,167,169
FIRST LINE	003,009,026,051,062,129
FISHER	000,003,006,018,027,029,040,083,131
FLINT	051,148
FORGESTONE	095
FORMENTI	000,001,003,043,125,131,133,169
FORTRESS	000,001
FRONTECH	002,009,019,021,068,118,129
FUJITSU	004,116,157
FUNAI	002,026
GALAXY	053,083
GBC	009,027,131
GEC	003,004,021,041,051,123,132,141,169
GELOSO	009,019,131
GENERAL TECHNIC	009
GENEXXA	011,021,051
GOLDSTAR	003,009,012,019,051,084,093,129,131 169,171
GOODMANS	002,004,009,027,028,051,068,093,111 115,127,153,169,171
GORENIE	083
GPM	011
GRAETZ	021,141,142
GRANADA	003,004,006,019,027,031,040,043,051 054,064,123,127,128,133,138,169
GRANDIN	009,011,120,169
GRUNDIG	008,017,043,091,101,114,117,135,136
HAAZ	228
HALIFAX	002,003
HAMPTON	003
HANSEATIC	003,007,009,026,027,051,073,118,131 141,169
HANTAREX	009,123
HARWOOD	171
HAUPPAUGE	193
HCM	002,003,009,074,120
HIFIVOX	139
HINARI	006,009,011,027,043,051,137,169,171
HISAWA	011,120,148
HITACHI	003,004,016,019,021,023,027,033,041 045,046,047,085,118,123,131,133,134 138,139,140,141,142,144,213
HOSHAI	011
HORNYPHON	051
HUANYU	003,115
HYGASHI	003
HYPER	003,009,129,131
HYPSON	002,003,051,120,169
ICE	002,003,009,011,051,068
IMPERIAL	021,043,051,053,083,129,131
INDESIT	024,101
INDIANA	051,169
INGELEN	021
INGERSOL	009
INNO HIT	003,004,009,011,051,093,123,169
INNOVATION	002,009,061,067,068,087,103,107,111 115,154,156,168,171,175,176,177
INTERBUY	009,109,129
INTERFUNK	000,021,051,129,139,141,169
INTERVISION	002,003,014,109
IRRADIO	009,011,051,068,169
ISUKAI	011
ITC	003,131
ITS	011,051,068,120
ITT	009,021,031,061,132,133,141,142,143
ITV	009,088,169,171
JEC	164
JVC	027,051,068,081
KAISUI	003,009,011,120
KAMOSONIC	003
KAMP	003
KAPSCH	021,157
KARCHER	003,009,016,037,169
KENDO	014,019,028,108
KENNEDY	131,157
KINGSLEY	003
KNEISSEL	174
KOLSTER	051
KONKA	011,047,229
KORPEL	051,169
KORTING	000
KOYODA	009
KTV	003
KURO	121
KYOTO	037
LENCO	009
LENOIR	003,009
LESA	129
LEYCO	002,004,026,051,169
LG	003,009,012,019,051,084,088,093,119 129,131,149,169,171,211,214
LIESENK	169
LIFE	002,009,061,067,068,087,103,107,111 115,154,156,168,171,175,176,177
LIFETEC	002,009,038,042,044,047,061,063,067 068,087,103,107,115,154,155,156,168 171,175,176,177,181,185,205,206,207 208,209,210,228
LOEWE	097,098
LOEWE OPTA	000,051,169
LOGIK	030
LUMA	019,141,157,169
LUMATRON	002,019,051,074,088,107,141,157,169,171
LUX MAY	051
LUXOR	003,019,047,077,093,101,132,138,141,196
M-ELECTRONIC	003,009,016,018,021,036,051,068,109 110,115,139,169
MAGNADYNE	000,014,123,129,131,169
MAGNAFON	003,014,043,123
MAGNUM	002,009,061,067,068,087,103,107,111 115,154,156,168,171,175,176,177
MANDOR	002
MANESTH	002,003,028,051,169
MARANTZ	051,169
MARELLI	000
MARK	051,169
MATSUI	003,004,009,013,019,025,026,027,028 030,051,062,068,091,099,123,147,148 164,169,173,180,215
MATSUSHITA	065
MCMICHAEL	041
MEDIATOR	051,169

MEDION.....	002,009,038,042,044,047,061,063,067 068,087,103,107,115,154,155,156,168 171,175,176,177,178,181,185,205,206,207 208,209,210,228	PHILIPS.....	000,003,020,041,043,051,088,089,095 111,115,131,141,155,169,200,204,217 218
MEMOREX.....	009	PHOENIX.....	000,051,169
MEMPHIS.....	004,009,113	PHONOLA.....	000,051,169
METZ.....	000,075,135,151,152,201	PIONEER.....	010,021,036,051,139,145,169
MICROMAXX.....	002,009,038,042,044,047,061,063,067 068,087,103,107,115,154,155,156,168 171,175,176,177,178,181,185,205,206,207 208,209,210,228	PLANTRON.....	002,051
MICROSTAR.....	002,009,038,042,044,047,061,063,067 068,087,103,107,115,154,155,156,168 171,175,176,177,178,181,185,205,206,207 208,209,210,228	POPPY.....	009
MINERVA.....	017,101,135	PRANDONI-PRINCE.....	019,123,141
MINOKA.....	051	PRECISION.....	003,165
MITSUBISHI.....	000,027,030,051,054,055,057,060,098 101,135,170,171	PRIMA.....	009,021
MIVAR.....	003,043,073,093,123	PRINZ.....	047
MOTION.....	043	PRO2.....	002,009,038,042,044,047,061,063,067 068,087,103,107,115,154,155,156,168 171,175,176,177,178,181,185,205,206,207 208,209,210,228
MTC.....	132	PROFEX.....	009,043,141
MULTI SYSTEM.....	169	PROFILO.....	171
MULTITECH.....	003,009,014,019,027,043,045,129,131,169	PROFI-TRONIC.....	051
MURPHY.....	003,018,133	PROLINE.....	004,051,062
NAD.....	141	PROSONIC.....	003,015,042,068,088,107,161,169,171
NAIKO.....	099	PROTECH.....	002,003,009,014,051,113,129,131,132 165,169
NAONIS.....	019,108	PROVISION.....	169,171
NATIONAL.....	064,101	PYE.....	051,068,169
NEC.....	027,056,185	PYMI.....	009
NECKERMANN.....	000,003,008,019,022,051,083,118,132,169	QUASAR.....	129
NEI.....	051,068,113,169	QUELLE.....	002,003,016,017,018,022,026,030,051 076,129,131,135,141,169,171
NESCO.....	129	QUESTA.....	027
NEWTECH.....	009,051	RADIOLA.....	051,169
NEW WORLD.....	011	RADIOTONE.....	007,051
NICAMAGIC.....	003	RADIOMARELLI.....	000,123,129
NIKKAI.....	002,003,004,011,051,113,164,169	RADIONETTE.....	016,018
NOBLIKO.....	003,014,017,043	RANK.....	017,027
NOGAMATIC.....	139	RBM.....	017
NOKIA.....	021,031,061,063,077,132,133,141,142,143	RCA.....	031
NORDMENDE.....	000,021,024,036,045,046,051,111,126 127,139	REDIFFUSION.....	141
NORDVISION.....	169	REVOX.....	051,169
OCEANIC.....	021,141,142	REX.....	002,019,021,108,157
OKANO.....	083	RFT.....	000,007
ONCEAS.....	003	R-LINE.....	051,169
ONWA.....	069	ROADSTAR.....	002,009,011
ORBIT.....	051	ROBOTRON.....	000
ORION.....	009,013,026,028,030,051,062,075,095 099,123,142,147,159,169,171,212,215	RTF.....	000
ORMOND.....	171	SABA.....	000,021,036,045,046,058,111,123,126 127,139,141,142
OSAKI.....	002,003,004,011,074,165	SACCS.....	037
OSO.....	011	SAISHO.....	002,003,009,013,028,030,095,123
OSUME.....	004,029	SALORA.....	019,021,031,047,061,093,107,108,118 121,128,131,132,138,141
OTTO VERSAND.....	001,003,008,027,051,076,111,118,120 121,131,132,139,141,169	SAMBERS.....	014,043,123
PAEL.....	003	SAMSUNG.....	002,003,004,009,030,051,083,090,093 104,105,160,165,169,172,192
PALLADIUM.....	003,012,083	SANDRA.....	003
PANAMA.....	002,003,009,165	SANSUI.....	051
PANASONIC.....	021,064,065,067,101,124,141,142,151 152,186,197	SANYO.....	003,004,006,016,018,027,029,030,031 040,043,073,127,131,160
PATHE CINEMA.....	003,037,073,131	SBR.....	041,095,169
PATHE MARCONI.....	022,037,045,046,126,139	SCHAUB LORENZ.....	021,141,142
PAUSA.....	009	SCHNEIDER.....	003,011,051,068,071,125,131,139,160 169,177
PERDIO.....	004	SEG.....	002,003,014,027,043,088,129,131,169,171
PHILCO.....	000,043,053,129,131	SEI-SINUDYNE.....	000,013,014,021,026,075,123
PHILHARMONIC.....	003,165	SELECO.....	019,021,027,108,131,157
		SENCORA.....	009
		SENTRA.....	164
		SHARP.....	001,005,027,029,059,187,188

SHORAI.....026
 SIAREM.....000,014,123,131
 SICATEL.....037
 SIEMENS.....008,022,029,135
 SIERRA.....051
 SIESTA.....160
 SILVER.....027
 SINGER.....000,014,129,131,228
 SINUDYNE.....000,013,014,026,028,075,131,169
 SKANTIC.....021,138,196
 SKYWORTH.....228
 SOLAVOX.....021,092
 SONITRON.....006,031
 SONOKO.....002,003,009,051,169
 SONOLOR.....006,021
 SONTEC.....051,160,169
 SONY.....004,009,027,029,030,076,106,127,130
 165,182,183
 SOUND & VISION.....011,014
 SOUNDWAVE.....051,169
 STANDARD.....003,009,011,051,165
 STARLIGHT.....169
 STENWAY.....120
 STERN.....019,021,157
 SUNKAI.....009,026,062
 SUNWOOD.....009,051
 SUPERLA.....003
 SUPERTECH.....118
 SUPRA.....009
 SUSUMU.....011
 SUTRON.....009
 SYDNEY.....003,165
 SYSLINE.....169
 TANDBERG.....026,157
 TANDY.....001,003,004,011,021,133,165
 TASHIKO.....003,019,027,041,056,128,165
 TATUNG.....003,004,025,051,123,165,169
 TCM.....002,009,038,042,044,047,061,063,067
 068,087,103,107,115,154,155,156,168
 171,175,176,177,181,185,205,206,207
 208,209,210,228
 TEC.....003,009,129,131,133,165
 TECHNICS.....065
 TELEAVIA.....022,036,045,111,126,139
 TELEFUNKEN.....022,035,036,050,051,052,078,079,101
 108,111,126,127,139,163,166,190
 TELETECH.....009,088,113,129,169
 TELETON.....003,118,132,157,165
 TEVION.....002,009,038,042,044,047,061,063,067
 068,087,103,107,115,154,155,156,168
 171,175,176,177,181,185,205,206,207
 208,209,210,228
 TENSAI.....168,011,018,026,051
 TESMET.....051
 TEXTET.....003,165
 THOMSON.....003,022,036,045,046,050,051,052,058
 101,102,111,126,127,139,163,166,185
 THORN.....004,018,035,037,054,081,095,111,127
 141,164,169
 TOKAI.....004,051
 TOKYO.....003
 TOMASHI.....120
 TOSHIBA.....017,027,082,114,146,164,189
 TOWADA.....021,131
 TRIDENT.....165
 TRIUMPH.....013,082,123
 UHER.....021,043,051,157

ULTRAVOX.....000,003,014,129,131,133
 UNITED.....088,169,171
 UNIVERSUM.....002,016,018,051,061,083,102,110,122
 129,131,143,169
 UNIVOX.....037
 VESTEL.....019,021,051,083,092,103,129,131,138
 168,169,171,194,195,196
 VEXA.....009,169
 VICTOR.....027,051,065
 VIDEOLOGIQUE.....003,011
 VIDEOSAT.....129
 VIDEO SYSTEM.....051
 VISIOLA.....003
 VISION.....051
 VISOREX.....096
 VISTAR.....133
 VORTEC.....051,169
 VOXSON.....000,019,021,043,051,108
 WALTHAM.....003,037,133,138,165
 WATSON.....051,169
 WATT RADIO.....003,014,037,131
 WEGA.....000,027
 WELTBlick.....051,169
 WESTON.....131
 WHARFEDALE.....099
 WHITEWESTINGHOUSE.....003,014,043,169
 YOKO.....002,003,009,011,051,165,169
 YORX.....011
 ZANUSSI.....019,108,157



VCR codes

AIWA.....230,231,232,233,248
 AKAI.....232,236,237,238,239,300,329
 AKIBA.....275
 AKURA.....232,244,275
 ALBA.....233,245,246,247,248,250,275
 ALLORGAN.....311
 AMBASSADOR.....250
 AMSTRAD.....231,253,254
 ANITECH.....275
 ASA.....256,257
 ASUKA.....231,256,257,275
 BAIRD.....231,232,237,245,258,259
 BASIC LINE.....233,245,250,275
 BAUR.....257,263
 BESTAR.....245,250
 BLACK PANTHER LINE.....245
 BLAUPUNKT.....257,260,261,262,263,271,309
 BONDSTEC.....250
 BRANDT.....303,305
 BRION VEGA.....264
 BROKSONIC.....277
 BUSH.....233,245,246,247,248,275,288
 CATRON.....250
 CGE.....231,232
 CIMLINE.....233,275
 CLATRONIC.....250
 COMBITECH.....248
 CONDOR.....245,250
 CROWN.....245,250,275
 CYBERCOM.....233,248,262,269,311,319
 CYBERMAXX.....233,248,262,269,311,319
 CYTRON.....233,248,262,269,311,319
 DAEWOO.....245,250,265,274,319
 DANSAI.....275

DANTAX.....	233
DAYTRON.....	245
DE GRAAF.....	257,266
DECCA.....	231,232,257
DUAL.....	232,233,248,257,262,311,319
DUMONT.....	231,257,258,266
ELIN.....	252
ELTA.....	275
EMERSON.....	301
ESC.....	245
ETZUKO.....	275
FERGUSON.....	232,259,271,278,281,294,305
FIDELITY.....	231,312
FINLANDIA.....	257,258,266
FINLUX.....	231,232,237,257,258,266,298
FIRST LINE.....	233,256,265,266,275,298
FISHER.....	258,279
FLINT.....	233
FORMENTI-PHEONIX.....	257
FRONTECH.....	250
FUJITSU.....	231
FUNAI.....	231
GALAXY.....	231
GBC.....	250,275
GEC.....	257
GELOSO.....	275
GENERAL.....	250
GENERAL TECHNIC.....	233,248,262,311
GOLDHAND.....	275
GOLDSTAR.....	231,256
GOODMANS.....	231,245,250,252,256,259,275,282,283
GRAETZ.....	232,258,264
GRANADA.....	240,257,258,266,271,285
GRANDIN.....	231,245,250,256,275
GRUNDIG.....	243,257,260,263,270,271,272,273,275 276,286,287,288,290
HAAZ.....	233
HANSEATIC.....	256,257
HCM.....	275,288
HINARI.....	233,248,275,288,301
HISAWA.....	233
HITACHI.....	231,232,257,266,268
HYPSON.....	233,275
IMPEGO.....	250
IMPERIAL.....	231
INNOVATION.....	233,248,262,311
INNO HIT.....	245,250,252,257,275
INTERBUY.....	256
INTERFUNK.....	257,258
INTERVISION.....	231
IRRADIO.....	256,275
ITT.....	232,237,258,264,292,293
ITV.....	245,256
JVC.....	232,293,294,295,296,297
KAISUI.....	275
KARCHER.....	257
KENDO.....	233,237,236,245,250,265,300
KENWOOD.....	232
KORPEL.....	275
LENCO.....	245
LEYCO.....	275
LIFETEC.....	233,248,262,269,311,319
LG.....	231,256
LOEWE.....	262,267
LOEWE OPTA.....	256,257,271
LOGIK.....	252,275
LUMATRON.....	245,274
LUXOR.....	237,258,282,298
MAGNASONIC.....	258
MANESTH.....	265,275
MARANTZ.....	257,271,282,299
MATSUI.....	233,248,256,301
M ELECTRONIC.....	231
MEDIATOR.....	257
MEDION.....	233,248,262,269,311,319
MEMOREX.....	231,240,256,258,279
MEMPHIS.....	275
METZ.....	261,262,263,267,271,273,325
MICROMAXX.....	233,248,262,269,311,319
MICROSTAR.....	233,248,262,269,311,319
MIGROS.....	231
MINERVA.....	263,271,050
MITSUBISHI.....	231,257,289,294,298
MULTITECH.....	231,250,257,275
MURPHY.....	231
NATIONAL.....	260,262
NEC.....	232,294,299
NECKERMANN.....	232,257,264,301
NEI.....	257
NESCO.....	275
NIKKAI.....	250,302
NOKIA.....	232,237,240,252,258,264,292,300
NORDMENDE.....	232,293,294,303,305
OCEANIC.....	231,232,240
OKANO.....	233,300
ORION.....	233,234,246,248,283,301,304
ORSON.....	231
OSAKI.....	231,256,275
OTTO VERSAND.....	257
PALLADIUM.....	232,256,271,275,300
PANASONIC.....	260,261,262,267,314,321,325
PATHE CINEMA.....	301
PATHE MARCONI.....	232
PENTAX.....	266
PERDIO.....	231
PHILCO.....	299
PHILIPS.....	235,242,257,271,290,293,315,317,327
PHONOLA.....	257
PIONEER.....	257,294
PORTLAND.....	245,250
PRINZ.....	231
PRO.....	233,248,262,269,311,319
PROFEX.....	275
PROLINE.....	231,288
PROSONIC.....	233,245
PYE.....	257
QUARTZ.....	258
QUELLE.....	231,257,258,263,264,271,301
RADIOLA.....	257
REX.....	232,293
RFT.....	250,257
ROADSTAR.....	245,252,256,275
SABA.....	232,281,293,303,305,324
SAISHO.....	233,248,275,301
SALORA.....	237,258,292,298
SAMSUNG.....	252,311,312
SAMURAI.....	250
SANSUI.....	232,244,294
SANYO.....	258,279,284
SAVILLE.....	248
SBR.....	257
SCHAUB LORENZ.....	231,232,237,258,264
SCHNEIDER.....	231,233,245,250,256,257,265,275
SEG.....	252,275

SEI-SINUDYNE.....	257
SELECO.....	232
SENTRA.....	250
SENTRON.....	275
SHARP.....	240,241,282,328
SHINTOM.....	258,275
SHIVAKI.....	256
SIEMENS.....	256,258,263,271
SILVA.....	256
SINUDYNE.....	257
SOLAVOX.....	250
SONOKO.....	245
SONOLOR.....	240
SONTEC.....	256
SONY.....	249,251,255,308,309,310,313,316
STANDARD.....	245
STRONG.....	244
SUNKAI.....	233
SUNSTAR.....	231
SUNTRONIC.....	231
SUNWOOD.....	275
TAISHO.....	233
TANDBERG.....	263,301
TASHIKO.....	231,240
TATUNG.....	231,232,257
TCM.....	233,248,262,269,311,319
TEC.....	250
TECHNICS.....	260,262
TELEAVIA.....	232
TELEFUNKEN.....	232,280,293,294,295,303,305,306 307,323,324
TENOSAL.....	275
TENSAI.....	231,256,275
TEVION.....	233,248,262,269,311,319
THOMSON.....	232,242,293,294,295,305,323,324
THORN.....	232,258,301
TIVO HDD.....	242,316
TOKAI.....	256,275
TONSAI.....	275
TOSHIBA.....	232,257,265,293,298,319,320
TOWADA.....	275
TOWIKA.....	275
TRIUMPH.....	301
TVA.....	250
UHER.....	256,264
ULTRAVOX.....	264
UNITECH.....	252
UNITED QUICK STAR.....	245
UNIVERSUM.....	231,237,239,253,256,257,263,271,290
VICTOR.....	294,295
VIDEON.....	233,248,262,311
WELTBlick.....	256
WHITE WESTINGHOUSE.....	264
YAMISHI.....	275
YOKAN.....	275
YOKO.....	250,252,256,275



SATELLITES

SAT

AKAI.....	552
ALBA.....	401,402,404,405,407,451,482,562
ALDES.....	405,408,409
ALLSAT.....	410,462,552
ALLSONIC.....	408,428

AMPERE.....	422
AMSTRAD.....	415,416,417,419,421,541,555,584
ANKARO.....	408,428
ANTTRON.....	401,407
APOLLO.....	401
ARCON.....	415,422,424,426,463
ARMSTRONG.....	419
ASAT.....	552
AST.....	435
ASTON.....	406,594
ASTRA.....	419,429,431,432,502
ASTRO.....	407,409,428,439,441
AUDIOTON.....	407,462
AXIS.....	415,428,432,456
BARCOM.....	424
BEST.....	424,428
BLAUPUNKT.....	439
BOCA.....	419,502,635
BRANDT.....	565,566,567,574
BRAIN WAVE.....	444
BROADCAST.....	443
BT SATELLITE.....	420,574
BUSH.....	402,404,410,446,451,482,562
CANAL +.....	569
CHANNEL MASTER.....	405
CHAPARRAL.....	507
CHESS.....	547,586
CITYCOM.....	402,459
CLATRONIC.....	444
CLEMENS KAMPHUS.....	491
CNT.....	409
COLUMBUS.....	477
COMMLINK.....	408
COMTECH.....	456
CONDOR.....	428
CONNEXIONS.....	438,454
CONTEC.....	456,459
COSAT.....	462
CROWN.....	419
CYBERCOM.....	412,413,423,428,442,493,504,511,514 546,566,583,586,587,618,619
CYBERMAXX.....	412,413,423,428,442,493,504,511,514 546,566,583,586,587,618,619
CYTRON.....	412,413,423,428,442,493,504,511,514 546,566,583,586,587,618,619
DAERYUNG.....	438
DANSAT.....	410
DDC.....	405
DECCA.....	460
DELEGA.....	405
DEW.....	456
DIAMOND.....	461
DISKXPRESS.....	424,454
DITRISTRAD.....	462
DNT.....	438,552
DONG WOO.....	501
DRAKE.....	463,557
DUAL.....	412,413,423,428,493,504,511,566,583 586,587,618,619
ECHOSTAR.....	425,438,464,465,467,481,578,579,580 581,586
EINHELL.....	401,408,417,419
ELEKTA.....	409
ELTA.....	401,428,462,552
EMANON.....	401
EMME ESSE.....	428,446,491
EP SAT.....	402

EURODEC	603
EUROSAT	419
EUROSKY	419,428
EUROSPACE	468
EUROSTAR	419
EXATOR	401,407
FERGUSON	402,410,446,471,472,473,603
FIDELITY	415,417
FINLANDIA	402
FINLUX	402,429,475,480,487,608
FINNSAT	456,603
FORCE	535,553,577
FOXTEL	602
FRACARRO	562
FRANCE SATELLITE/TV	477
FREECOM	401,489
FTE	420,422,496
FUBA	401,424,428,431,438,439,477,480,548,552
GALAXIS	408,428,432,456,462,478,484,535,582,583
GALAXY	424
GMI	419
GOLDSTAR	489
GOODING	483
GOODMANS	402,451,482,526
GRANADA	429
GROTHUSEN	401,489
GRUNDIG	402,407,436,439,446,483,495,512,550 555,584,602
HANSEATIC	504
HANTOR	401,444,501
HANURI	409
HELIOCOM	422
HINARI	405
HIRSCHMANN	439,487,488,491,522,547,548,558
HISAWA	444
HITACHI	402,446,537
HOUSTON	462
HUTH	408,411,419,443,444,456,462,491
HUMAX	485,517,582
HYUNDAI	486
IMPERIAL	482,562
INNOVATION	428,493,504,511,583,586,587,618,619
INTERTRONIC	419
INTERVISION	462
ITT/NOKIA	402,429,446,454,487,537,548
JOHANSSON	444
JSR	462
JVC	483
KATHREIN	439,441,459,496,498,499,507,549,552 607,617,631
KOSMOS	489,491,496
KR	407
KREISELMEYER	439
KYOSTAR	401
LABGEAR	513
LASAT	409,428,500,501,502,565,566,567
LENCO	401,420,489,503
LENG	444
LENNOX	462
LENSON	479
LIDCOM	451
LIFE	583
LIFESAT	412,413,423,428,442,493,504,511,514 546,566,583,586,587,618,619
LIFETEC	412,413,423,428,442,493,504,511,514 546,566,583,586,587,618,619
LION	468
LG	489
LORRAINE	489
LUPUS	428
LUXOR	417,429,537,548
LYONNAISE	603
MACAB	603
MANHATTAN	402,403,409,446,462,633
MARANTZ	552
MASCOM	409
MASPRO	402,446,471,483,507,558
MATSUI	483,574
MB	504
MEDIAMARKT	419
MEDIASAT	432
MEDION	412,413,423,428,442,493,504,511,514 546,566,583,586,587,618,619
MEGA	552
METRONIC	401,407,408,409,424,601,612,613,614 615,632
METZ	439
MICROMAXX	412,413,423,428,442,493,504,511,514 546,566,583,586,587,618,619
MICROSTAR	412,413,423,428,442,493,504,511,514 546,566,583,586,587,618,619
MICROTECHNOLOGY	468
MINERVA	439,483
MITSUBISHI	402,439,574
MITSUMI	502
MORGANS	419,502,552
MORGAN SYDNEY	611
MULTICHOICE	602
MULTISTAR	496,501
MULTITEC	586,587
MURATTO	437,489
NAVEX	444
NEC	509,510
NEUHAUS	432,462,479
NEXTWAVE	414,585
NIKKO	419
NOKIA	402,429,446,454,487,519,530,531,544 548,563,564,425
NOMEX	622
NORDEMNDE	401,402,405,409,472,549,603
NOVIS	444
OCEANIC	461,468
OCTAGON	401,407,456
OKANO	419,491,496
OPTEX	459,462
ORBIT	435
ORBITECH	401
ORIGO	468
OSAT	407
OTTO VERSAND	439
PACE	402,410,439,446,453,471,482,508,527 555,559,584
PACIFIC	461
PALCOM	405,431,477,479
PALLADIUM	419,483
PALTEC	431
PANASONIC	402,446,542,555,584
PANDA	402,410
PANSAT	490
PHILIPS	402,427,434,436,446,455,483,493,495 508,515,550,552,561,599,600,605
PHOENIX	456,482
PHONOTREND	408,462,491
PIONEER	457,620
POLSAT	603
POLYTRON	459
PREDKI	444

PREMIERE462,544,564,569
 PRIESNER419,445
 PRO2412,413,423,428,442,493,504,511,514
 546,566,583,586,587,618,619
 PROFI503
 PROMAX402
 PROSAT404,405,408,482,562
 PROTEK461
 PROVISION409
 QUADRAL405,408,428
 QUELLE417,439
 QUIERO603
 RADIOLA552
 RADIX438,630
 RAINBOW407
 REBOX476
 REDIFFUSION510
 REDPOINT432
 REDSTAR428
 RFT408,552
 RUEFACH503
 SABA404,409,446,468,471,472,543,556
 562,565,571,572,573,575
 SABRE402
 SAGEM570,603,604
 SAKURA456,482
 SALORA429,509,510,527
 SAMSUNG401,426
 SAT405,415,435,437
 SATCOM443,504,523
 SATEC446
 SATFORD443
 SATMASTER443
 SATPARTNER401,407,409,444,489,491
 SCHNEIDER428,455,511,583,586,587,618,635
 SCHWAIGER411,412,430,433,440,459,498,504,508
 516,566,573,575,576,577,582,583,585
 587,598,616,631,633,635
 SEEMANN419,432,438
 SEG401,428,444,504,541,631,634
 SELECO462
 SIEMENS439
 SILVA489
 SKARDIN432
 SKY DIGITAL555,584
 SKYMASTER408,504,546,547,586,587,588,589,590
 591,592,621
 SKYMAX552
 SKYVISION462
 SONY418,447,555,584
 SR419,472,502
 STARLAND586
 STARRING444
 STAR TRAK401
 STRONG401,407,428,454,489,545,562
 SUMIDA419
 SUNSTAR419,502,527
 TANDBERG603
 TANDY407
 TANTEC402,446,471,477,479
 TATUNG460
 TCM412,413,423,428,442,493,504,511,514
 546,566,583,586,587,618,619
 TECO419,502
 TECHNILAND443
 TECHNISAT438,479,528,529,623
 TELANOR405

TELASAT504
 TELEFUNKEN401,446,560,565,566,567,574
 TELEKA407,419,426,438
 TELEMASTER409
 TELEMAR500
 TELESAT504
 TELESTAR479
 TELEVES402,610,611
 TELEWIRE462
 TEVION412,413,423,428,442,493,504,511,514
 546,566,583,586,587,618,619
 THOMSON402,472,532,560,568,574,603
 THORENS461
 THORN402,410,446,471,473
 TIOKO459
 TONNA402,443,462
 TOPFIELD497,505,506
 TPS570
 TRIAD435,437,489,533
 TRIASAT480
 TRIAX439,479,565,609
 TWINNER610,611
 UNIDEN534
 UNISAT419,456
 UNITOR424,444
 UNIVERSUM439,475,483,487
 VARIOSTAT439
 VECTOR468
 VENTANA552
 VIA DIGITAL568
 VISIOSAT444,462,586,593,594,595,596,597
 VIVANCO536,624
 VORTEC401,426
 V-TECH435,437,515,537
 WEWA402
 WEVASAT402
 WINERSAT444
 WISI402,435,437,438,439,533,538,539,540
 597,625,626,627,628,629
 WITTENBERG415
 WOORISAT409
 ZEHNDER409,424,428,437,496,498,541,631,632
 ZODIAC407

CBL

CABLETIME448,449,450
 CABLE AND WIRELESS606
 CLYDE CABLEVISION452
 CRYPTOVISION458
 FILMNET CABLECRYPT474
 FILMNET COMCRYPT474
 FOXTEL602
 GEC452
 GRUNDIG415,483
 IMPULSE554
 JERROLD494,554
 MOVIE TIME551
 NTL606
 OPTUS494
 PACE606
 PIONEER415,518,521
 SCIENTIFIC ATLANTA524,525
 STS551
 TELE+1474
 TELEWEST554,606
 VISIOPASS487

DVBT/TNT/DTT/TTD

DVBT : Digital Video Broadcast Terrestrial (GB)

TNT : Télévision Numérique par Satellite (F)

DTT : Television Digitale Terrestre (I)

TTD : TV Digital Terrestre (E)

ALBA.....	451
BUSH.....	451
GOODMANS.....	451,526
GRUNDIG.....	512
LABGEAR.....	513
LIDCOM.....	451
NOKIA.....	519,531
PACE.....	453
PHILIPS.....	600
PIONEER.....	457,620
REBOX.....	476
SONY.....	447
THOMSON.....	532



DVDs

DVD

ACCOUSTIC SOLUTIONS.....	383
AIWA.....	377
AKAI.....	369
ALBA.....	350,381,384
AMES.....	383
AMSTRAD.....	350
APEX.....	357,384,390,840
ARENA.....	851
A-TREND.....	347
BUSH.....	350,381,382,384
BLACK DIAMOND.....	350
BRANDT.....	373
BROKSONIC.....	857
CENTRUM.....	346,854,855,856
CINEVISION.....	375
CLASSIC.....	383
CMI.....	851
CROWN.....	373
CYBERCOM.....	330,334,335,338,339,340,341,342,343 344,345,352,356,358,371,372,373,664 851,852,859,864,865
CYBERHOME.....	347
CYBERMAXX.....	330,334,335,338,339,340,341,342,343 344,345,352,356,358,371,372,373,664 851,852,859,864,865
CYTRON.....	330,334,335,338,339,340,341,342,343 344,345,352,356,358,371,372,373,664 851,852,859,864,865
DAEWOO.....	353,354,355
DAYTRON.....	853
DENON.....	364,389
DENVER.....	381
DIK.....	356
DIVX.....	864
DMTECH.....	351
DUAL.....	330,334,335,337,338,340,341,342,343 344,345,350,352,356,358,371,372,373 383,392,664,851
DVD 1024.....	858
ELTA.....	365,382
EMERSON.....	375
FERGUSON.....	373
FINLUX.....	375

FISHER.....	378
GE.....	384
GOLDEN SPHERE.....	341
GOODMANS.....	373,382
GOLDSTAR.....	375
GO-VIDEO.....	338,367
GRADIENTE.....	373
GRUNDIG.....	370,380,385
H & B.....	343
HARMON/KARDON.....	395
HAAZ.....	341,342
HITACHI.....	367,368,387
INTERTRONIC.....	865
INITIAL.....	384
INNOVATION.....	356,371,372,373
INTEGRA.....	374
JBL.....	395
JVC.....	361,662
KENDO.....	356,851
KENWOOD.....	364,393
KLH.....	384
KOSS.....	373
LASONIC.....	341
LECSON.....	376
LENOXX.....	862
LIFE.....	371,372,373
LIFETEC.....	330,334,335,338,339,340,341,342,343 344,345,352,356,358,371,372,373,664 851,852,859,864,865
LIMIT.....	341
LINN.....	336
LG.....	375,866
LOEWE.....	370
LUMATRON.....	332,342
MAGNAVOX.....	362,860,861
MARANTZ.....	362,370,375,379
MATSUI.....	373
MBO.....	396
MAXIM.....	331
MEDION.....	330,334,335,338,339,340,341,342,343 344,345,352,356,358,371,372,373,664 851,852,859,864,865
METZ.....	368
MICROMAXX.....	330,334,335,338,339,340,341,342,343 344,345,352,356,358,371,372,373,664 851,852,859,864,865
MICROSOFT.....	399
MICROSTAR.....	330,334,335,338,339,340,341,342,343 344,345,352,356,358,371,372,373,664 851,852,859,864,865
MINTEK.....	384
MITSUBISHI.....	350,366
MUSTEK.....	383
NAD.....	375,394
NAKAMICHI.....	398
ONKYO.....	374
ORION.....	857
ORITRON.....	373
PACIFIC.....	356
PANASONIC.....	364
PHILIPS.....	362,370,379,860,861
PHILIPS MAGNAVOX.....	362,370,379
PIONEER.....	368,850
PRISM.....	335
PRO2.....	330,334,335,338,339,340,341,342,343 344,345,352,356,358,371,372,373,664 851,852,859,864,865

PROLINE.....	373
PROSCAN.....	399
PROSONIC.....	332,341,349
RCA.....	384,399
REOC.....	341
REX.....	346
RTL.....	851
SABA.....	373
SALORA.....	375
SAMPO.....	341,386
SAMSUNG.....	311,338,367,863
SANSUI.....	857
SANYO.....	378
SCHNEIDER.....	350,351,352,356,373
SCHWAIGER.....	349
SEG.....	341,350,392
SHARP.....	371,394
SHERWOOD.....	391
SHINCO.....	384
SHINSONIC.....	384
SKYMASTER.....	382,383
SM ELECTRONIC.....	382,383
SONY.....	363
SUPERVISION.....	382
SYLVANIA.....	339
TCM.....	330,333,334,335,338,339,340,341,342 343,344,345,352,356,358,371,372,373 664,851,852,859,864,865
TEAC.....	341,368,384
TECHNICS.....	364,399
TEVION.....	330,334,335,338,339,340,341,342,343 344,345,352,356,358,371,372,373,664 851,852,859,864,865
TECHWOOD.....	394
THETA DIGITAL.....	368
THOMSON.....	359,360,399
TOSHIBA.....	362,857
UNITED.....	333,348
UNIVERSUM.....	350
WHARFEDALE.....	376
XENIUS.....	358,373
YAMAHA.....	364,388,860,861
YAMAKAWA.....	397
ZENITH.....	375

DVD-R (Recorder)

ARENA.....	851
CMI.....	851
CYBERCOM.....	851
CYBERMAXX.....	851
CYTRON.....	851
DUAL.....	851
HITACHI.....	387
KENDO.....	851
LIFETEC.....	851
MEDION.....	851
MICROMAXX.....	851
MICROSTAR.....	851
PHILIPS.....	860,861
PRO2.....	851
RTL.....	851
TCM.....	851
TEVION.....	851
YAMAHA.....	860,861



AUDIO

CD

ADCOM.....	648
AIWA.....	649,650,651,751
AKAI.....	653,654,655
ALBA.....	656
ARCAM.....	732
BESTAR.....	659
BSR.....	660
BUSH.....	661
CARRERA.....	663
CLASSIC.....	807
CONDOR.....	660
CYBERCOM.....	643,664,668,674,675,694,730,742,743 744,745,746,747,801,802,803,807,809
CYBERMAXX.....	643,664,668,674,675,694,730,742,743 744,745,746,747,801,802,803,807,809
CYTRON.....	643,664,668,674,675,694,730,742,743 744,745,746,747,801,802,803,807,809
DENON.....	665,666
DUAL.....	643,648,664,668,675,694,730,742,743,744, 745,746,747,798,801,802,803
EMERSON.....	648,659
ELTA.....	667,668,693,694,745
FISHER.....	669
GENEXXA.....	659,671,672,673,675,676,677
GOLDSTAR.....	663
GOODMANS.....	678,679
GRUNDIG.....	680,697,698,732
HARMON KARDON.....	683
HITACHI.....	648,685,686
INNOVATION.....	730,742,743,744,745,746,747
JVC.....	662,687
KENWOOD.....	669,688,689,690,762
LIFETEC.....	643,664,668,674,675,694,730,742,743 744,745,746,747,801,802,803,807,809
LINN.....	732
LG.....	663
LUXMAN.....	691
MAGNUM.....	730,742,743,744,745,746,747
MARANTZ.....	695,732
MATSUI.....	696,732
MEDION.....	643,664,668,674,675,694,730,742,743 744,745,746,747,801,802,803,807,809
MEMOREX.....	648,659,677
MERIDIAN.....	732
MICROMEGA.....	732
MICROMAXX.....	643,664,668,674,675,694,730,742,743 744,745,746,747,801,802,803,807,809
MICROSTAR.....	643,664,668,674,675,694,730,742,743 744,745,746,747,801,802,803,807,809
MISSION.....	732
NAD.....	671,733,735,736,737,800
NAIM.....	732
NAKAMICHI.....	699,700
ONKYO.....	640,701,702,703,785,792
PANASONIC.....	661,705
PHILIPS.....	647,706,732
PHILIPS CD-V.....	640
PIONEER.....	673,677,753
PRO2.....	643,664,668,674,675,694,730,742,743 744,745,746,747,801,802,803,807,809
PROTON.....	732
QUAD.....	732
REALISTIC.....	648,659,675
ROADSTAR.....	706,708
ROTEL.....	732
SABA.....	648

SAE.....	732
SAMSUNG.....	768
SANSUI.....	647,709,710,711,732
SCHNEIDER.....	627,660,732
SCOTT.....	659
SHARP.....	672,712,713,714
SHERWOOD.....	782
SINGER.....	803
SKYMASTER.....	778
SONY.....	671,716,717,718,741,748,749,750
TANDBERG.....	732
TCM.....	643,664,668,674,675,694,730,742,743 744,745,746,747,801,802,803,807,809
TEAC.....	795
TECHNICS.....	705,721,763,787
TELEFUNKEN.....	648
TEWION.....	643,664,668,674,675,694,730,742,743 744,745,746,747,801,802,803,807,809
THEORE & ANWENDING.....	804
THOMSON.....	642,648
TOSHIBA.....	722,723
UNIVERSUM.....	732
VECTOR RESEARCH.....	663
VICTOR.....	687
WELLTECH.....	675,694,744
YAMAHA.....	712,720,725,771
YORX.....	708

AUX

Audio Amplifiers/Tuners/Receivers

CENTRUM.....	692
CYBERCOM.....	641,775,776
CYBERMAXX.....	641,775,776
CYTRON.....	641,775,776
DENON.....	779,781
DUAL.....	641,775,797
ELTA.....	667,668
GRUNDIG.....	697,698,727
HARMON KARDON.....	682
KENWOOD.....	761
LIFETEC.....	641,775,776
LINN.....	657
MARANTZ.....	727
MEDION.....	641,775,776
MICROSTAR.....	641,775,776
MICROMAXX.....	641,775,776
NAD.....	735,736,737,738,799,800
ONKYO.....	785,792,793
PHILIPS.....	646,727
PRO2.....	641,775,776
SANSUI.....	727
SCHNEIDER.....	791
SHERWOOD.....	782
SONY.....	739,740,755,757,758,759,760
TCM.....	641,775,776,806
TEAC.....	794,796
TECHNICS.....	764,777,788
TEWION.....	641,775,776
THEORE & ANWENDING.....	805
THOMSON.....	642,766
YAMAHA.....	724,752,770,771,772

Audio Tape Players

AIWA.....	790
DENON.....	780
GRUNDIG.....	729,698
HARMON KARDON.....	681
KENWOOD.....	761
MAGNAVOX.....	729
MARANTZ.....	729
NAD.....	799
ONKYO.....	784
PHILIPS.....	729
SANSUI.....	729
SHERWOOD.....	783
SONY.....	754,755,756
TEAC.....	794
TECHNICS.....	764,777,786
THOMSON.....	642
YAMAHA.....	724,772

MINI Systems

AIWA.....	773,774
CYBERCOM.....	652,658,704,745,808,810
CYBERMAXX.....	652,658,704,745,808,810
CYTRON.....	652,658,704,745,808,810
DUAL.....	652,658,704,745,797
ELTA.....	693,745
GRUNDIG.....	707
LIFETEC.....	652,658,704,745,808,810
MEDION.....	652,658,704,745,808,810
MICROSTAR.....	652,658,704,745,808,810
MICROMAXX.....	652,658,704,745,808,810
PIONEER.....	753
PRO2.....	652,658,704,745,808,810
SAMSUNG.....	768
SHARP.....	789
SONY.....	741
TCM.....	652,658,704,745,808,810
TEWION.....	652,658,704,745,808,810
WELLTECH.....	652,810

Misc

Video CD.....	640
Audio Combi.....	644
DBS.....	645
CDR.....	647,675
Switch Box.....	684

OTHERS...

LD (Laser Disc Player)




DENON.....	252
DISCO VISION.....	291
ELTA.....	337
GRUNDIG.....	318
HITACHI.....	291
MITSUBISHI.....	318
NAD.....	318
PHILIPS.....	319
PIONEER.....	291,318
RADIOLA.....	319
SONY.....	278
TELEFUNKEN.....	318
THORN.....	322


HOMEHOME

HOME AUTOMATION.....	821
X-10 (NEC).....	820

ROC 3205

TELETEXTE

 -  Access the contents
-  To stop scrolling pages
-  Back to TV programme

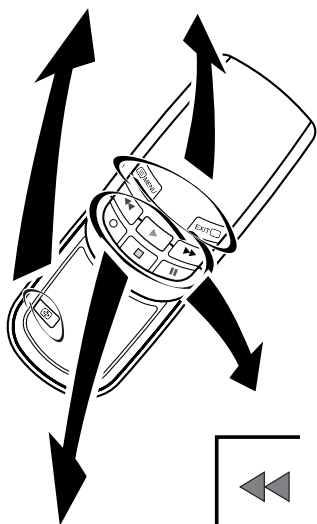


FASTTEXT



Access to headings

TOPTXT




 Blue: Access to headings

 Yellow: Access to articles



CODE 570
(Logo registered by TPS)

 ROC 3205

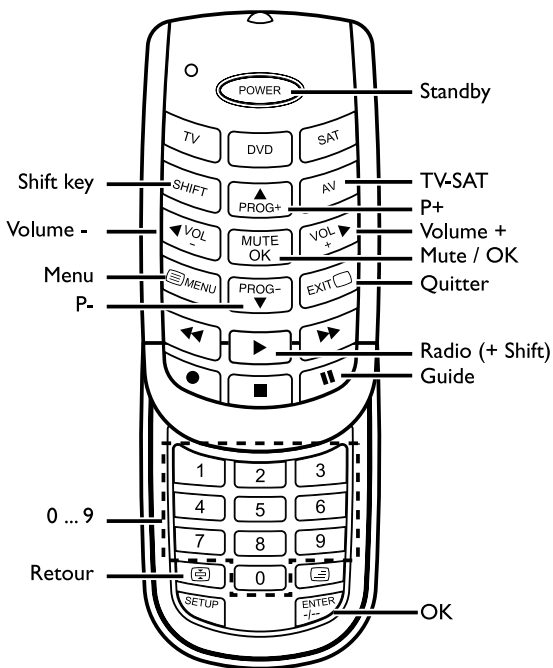

CANAL SATELLITE

TELE +


PREMIERE

CODE 569

(Logo registered by CANAL SAT)

(Logo registered by PREMIERE)

 ROC 3205

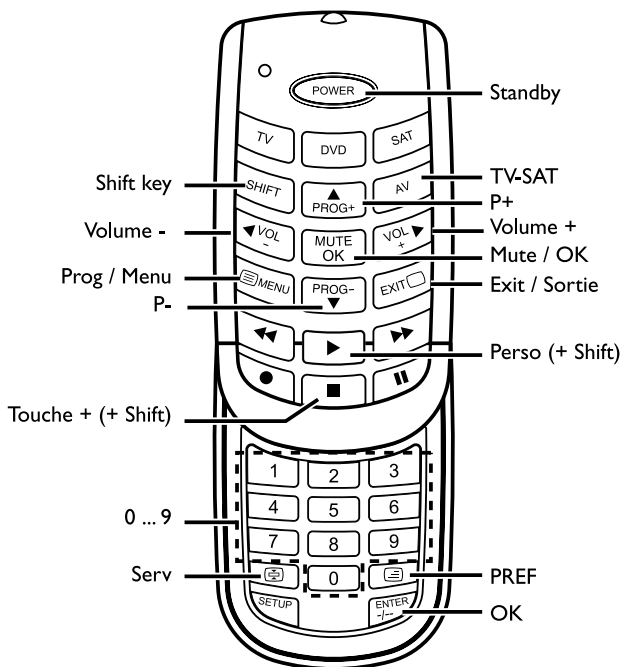


VIA

CODE 568

(Logo registered by VIA DIGITAL)

 ROC 3205

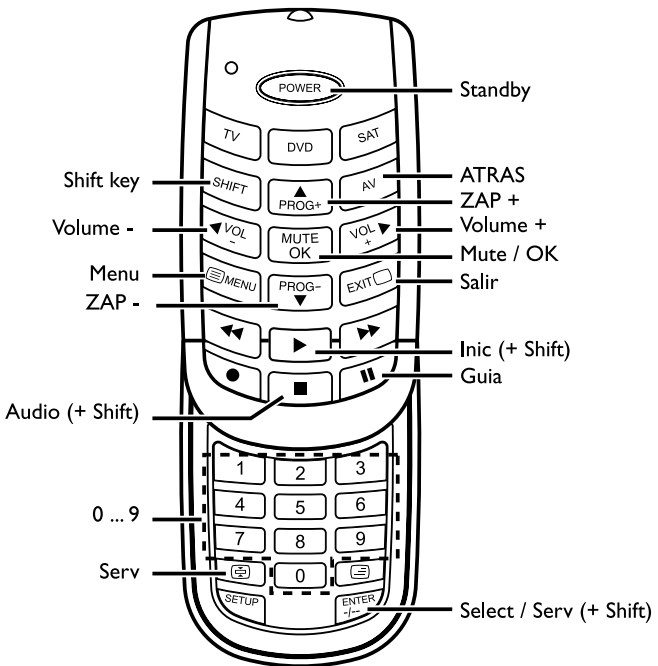

SKY

CODE 584

(Logo registered by SKY DIGITAL)

ROC 3205

